

Jog a Channel

Individual DMX channels may be jogged up and down. In this mode, it is not required to know the channel's exact value. Rather, it can be added to or subtracted from in arbitrary amounts, up to the limits of 0 or 255. This command may be useful when implementing bump buttons on a human interface control panel.

If a channel is jogged *past* the maximum or minimum values allowed in DMX, the command is ignored.

```
JN:X[cr]  
JN: -X[cr] JN:+X[cr]
```

- J is a capital J
- N is the DMX channel number, range is [1 512]
- X is a decimal number, either positive or negative, range [1 255]
- [cr] is a carriage return.

Revision #2

Created Tue, Oct 29, 2019 7:42 PM by ESINC

Updated Wed, Oct 30, 2019 10:51 PM by ESINC