

Set System Baud Rate

All standard RS-232 baud rates are supported. The change is stored in memory and naturally survives a power cycle. Default baud rate on new equipment is 115,200 8N1.

Baud rate is set at startup, so if it's changed using this command, power cycle the DMX Engine to activate the new setting.

```
B9600[cr]  
B19200[cr]  
B38400[cr]  
B57600[cr]  
B115200[cr]
```

All baud rates require require 8 data bits, 1 stop bit, no parity.

Revision #2

Created Wed, Oct 30, 2019 10:25 PM by ESINC

Updated Wed, Oct 30, 2019 10:28 PM by ESINC