

# Software Reset

The result here is the same as if the box is power cycled. After a reset, the standard RS-232 'splash screen' is transmitted to any receiving equipment which cares to listen.

```
I[cr] <--- That's I as in Igloo or India
```



```
RealTerm: Serial Capture Program 3.0.144
** RS-232 Double DMX Engine **
www.response-box.com/gear
Firmware 05.072
Started Standard DMX: 4
System is Active & Feelin' Groovy
Startup Scene: None, Delay: None
Updated Wed, Oct 30, 2019 10:28 PM by ESINC
```